



BIXOLON SLP-DX220G

1. Install the BIXOLON driver.

https://www.bixolon.com/download_view.php?idx=35&s_key=Driver

2. Select the model: METAPACE L-22D.

3. Select the USB port the printer is connected to (likely called Virtual Printer Port for USB).

4. Set the printer name to "BIXOLON".

5. Verify that the printer appears under "Printers & Scanners" and perform a test print (the printer only needs to respond to the test).

6. Set up the label size:

Search "Printers & Scanners" in Windows →

"BIXOLON" →

"Manage" →

"Printing Preferences" →

"Page Setup" →

"Edit" →

Configure the "Label Size" *Width* and *Height* according to **your** label size.

Start configuring "Exposed Liner Widths" to 0. If it does not fit, try increasing *Left* and *Right* in very small increments, until it fits.

A screenshot of a printer's configuration window. The window has a light gray background and a thin border. It is divided into two main sections. The top section is titled "Label Size" and contains two input fields: "Width:" with a value of "1.50 in" and "Height:" with a value of "1.00 in". The bottom section is titled "Exposed Liner Widths" and contains two input fields: "Left:" with a value of "0.00 in" and "Right:" with a value of "0.00 in". All input fields are rectangular with a light gray border and a small arrow on the right side, indicating they are text boxes.



Setup in Flea Lover

It is not always necessary to perform a setup in Flea Lover. Therefore, a test print can be attempted first. Follow the instructions below:

Go to your store in FleaLover and perform a test print by clicking **“Print Barcode”** for any customer.

A window should appear where labels can be printed. Before printing, it is important to first:

1. click **“More Settings”** and then set **“Margins”** to **“None”**.
2. Ensure **“Paper size”** is set to **“USER”**.

You can now print by clicking **“Print”**.